SCOSCHE

TA2079B

IN-DASH DOUBLE DIN INSTALLATION KIT FOR 2003-UP TOYOTA 4RUNNER WITH RDS

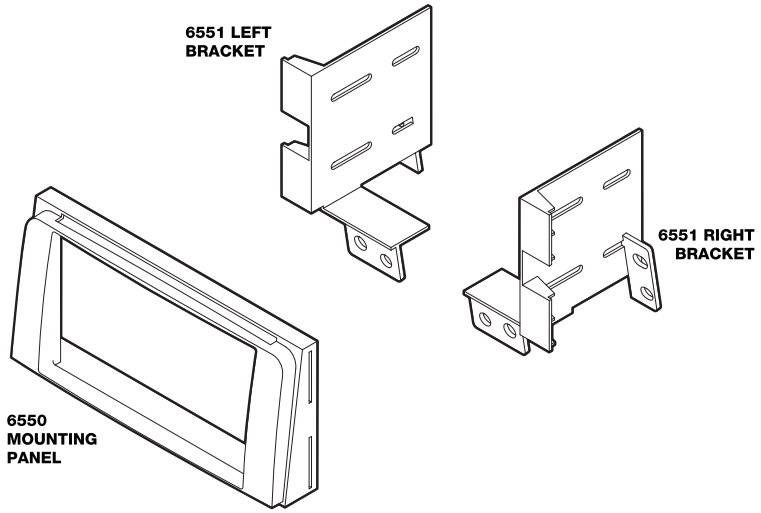

INTRODUCTION / PRELIMINARY

This premium installation kit is for 2003-Up Toyota 4Runner vehicles. Included are all the parts you need to mount your car stereo or CD player into your vehicle's dash. Refer to the individual instruction in this manual to remove your vehicle's factory radio and assemble the kit.

CAUTION

DISCONNECT YOUR VEHICLE'S NEGATIVE BATTERY TERMINAL BEFORE THE INSTALLATION TO HELP PREVENT ELECTRICAL DAMAGE. WE RECOMMEND THE USE OF A VOLT/OHM METER OVER A TEST LIGHT TO CHECK WIRING. A TEST LIGHT OR GROUNDED WIRE PROBE CAN CAUSE DAMAGE TO THE VEHICLE'S COMPUTER AND/OR DIAGNOSTIC SYSTEMS. AVOID ALL FACTORY AIRBAG WIRING - AIRBAGS CAN ACCIDENTALLY DEPLOY CAUSING SERIOUS INJURY OR DEATH.

NOTES

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo for proper wiring and mounting instructions.

FACTORY WIRING CODES

For Factory Wiring Codes go to: **www.scosche-cars.com**

CAR STEREO CONNECTORS

PROVIDE EASY CONNECTION OF YOUR CAR STEREO TO FACTORY WIRING HARNESS.

TA07SR
2003-Up Premium Sound Interface
for select Toyota/Lexus

LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit (TA2079B) in 2003-Up Toyota 4Runner vehicles. Scosche Industries, Inc. can not be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

If you have any further questions, call our toll free technical help line at: **1-800-621-3695x3**

©2008 SCOSCHE INDUSTRIES, INC.

FACTORY STEREO REMOVAL

2003-UP TOYOTA 4RUNNER WITH RDS

NOTE: The factory radio provision is for a DIN and half sized radio.

1. Remove top of the center console by prying upwards.
2. Remove sides of center console by prying upwards.
3. Remove lower dash panel below steering column. Extract one (1) 10mm bolt from lower right hand side.
4. Remove one (1) 10mm Phillips head screw from inside pocket below A/C controls.
5. Remove A/C controls by pulling towards you. Extract two (2) 10mm bolts behind A/C controls.
6. Pull dash trim bezel surrounding radio and pocket by pulling towards you. Disconnect all plugs and remove.
7. Remove two (2) 10mm bolts securing radio brackets to dash. Disconnect and remove radio.

MOUNTING THE STEREO

DOUBLE DIN MOUNT

1. Snap the 6551 (left & right) mounting brackets to the 6550 mounting panel.
2. Align, position and bolt the aftermarket double DIN-ISO head unit to the mounting brackets. Use the hardware supplied with the aftermarket double DIN-ISO head unit to secure the mounting brackets to the aftermarket stereo.
   Note: If hardware is not supplied with aftermarket stereo use hardware from factory stereo.

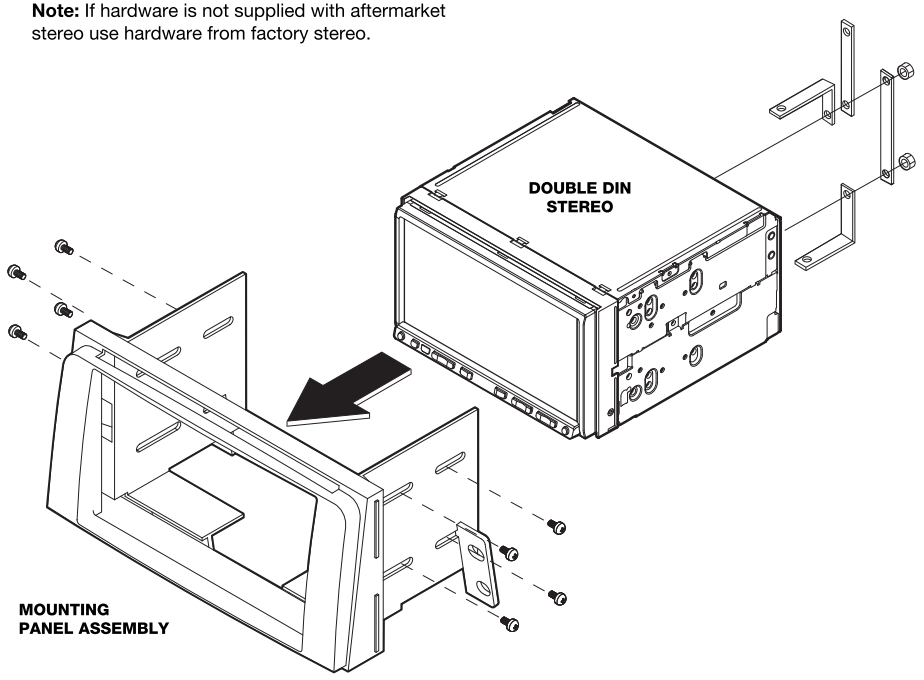

NOTE:
REAR SUPPORTING THE STEREO ADDS TO THE INSTALLATION'S STRUCTURAL INTEGRITY. REAR SUPPORT AVAILABLE SEPARATELY.